


SUPATRAC Peg Pot

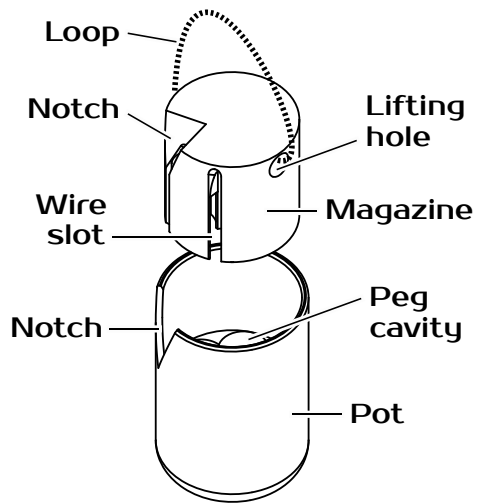


The 'Peg Pot' is a plug accessory for SUPATRAC tone-arms which makes mounting and dismounting the tonearm quicker and easier. The peg pot plug holds the arm's five electrical connection pegs in place so that they slide onto the DIN format connector pins inside the pillar all at once when the plug is inserted. The plug can also be withdrawn from the pillar easily.

INSTALLATION

- unscrew the retaining screw
- remove the magazine from the pot by pulling the loop
- insert the arm's electrical pegs as illustrated, taking care not to strain or abrade the Litz wires
- gently insert the loaded magazine into the pot with the notches lined up
- wiggle and twist the pot to ensure that the pegs enter their respective cavities
- press the magazine firmly into the pot without snagging wires

- gently tighten the retaining screw until the magazine is snug

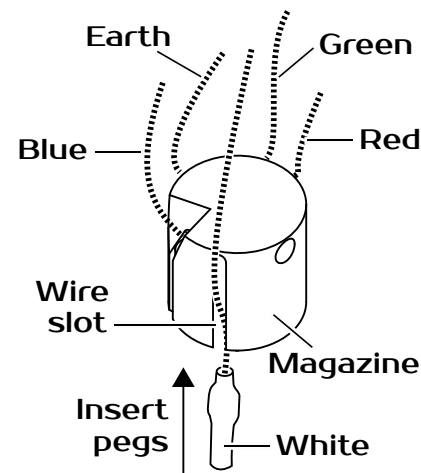

THREE WARNINGS

WARNING 1

The interior part ('magazine') of the peg pot is fragile. Excess pressure from fingers during assembly may break the walls of the magazine. Should this occur, it will not inhibit correct function of the plug. The fragile parts help the pegs to stay in position while the plug is assembled, but are not necessary.

WARNING 2

The exterior part ('pot') is also fragile - please take care not to squeeze it.

WARNING 3

Over-tightening the screw which holds the magazine inside the pot could strip the thread in the magazine - only tighten the screw until it is snug.

Replacement peg pots are available from SUPATRAC

INSTRUCTIONS

Connect/mount

- install stylus guard
- insert the two hoist toggles into the respective holes in the arm's thrust box
- lift the arm to give access to the pillar's electrics shaft
- gently insert the peg pot into the shaft with its notch facing the pillar's pivot point
- rotate the peg pot in the shaft to locate the five sockets over the five pins
- press the peg pot firmly down to engage pins

Disconnect/dismount

- install stylus guard
- lift arm to access peg pot
- use a small screwdriver or allen key to snag the loop or insert into lifting hole
- gently lift the peg pot out of the shaft making sure that you do not strain the fragile Litz cartridge wires
- feed the hoist toggles back through their respective holes to remove the tone-arm